

Quick Reference: Video, Voice and Multimedia

FUNDAMENTALS OF THE AMX TOUCH PANEL

- ❖ Press **VIDEO CONFERENCE**, **VOICE CONFERENCE**, or **MULTIMEDIA**
- ❖ Press the **DISPLAY OR PROJECTOR**
- ❖ Select a **SOURCE**
 - Wait approximately 5 seconds to activate.
 - Press the “Close (X)” button to return to the previous page or hide current menus
 - The “Press and Hold, Return to Main Page” button will return to the Main Page

POWER CYCLE THE TOUCH PANEL

- ❖ Unscrew the thumb screws for the DB9 connector
- ❖ Unplug the DB9 connector
- ❖ Reinsert the DB9 connector

VIEW COMPUTER VIDEO FROM POP-UP WITHOUT USING THE AMX TOUCH PANEL

- ❖ Attach the VGA cable to a pop-up
- ❖ Attach the short audio cable to a pop-up
- ❖ Attach the longest audio cable to a computer
- ❖ Attach the VGA cable to a computer
 - Extend the desktop (see computer manual)
- ❖ Press the left or right **LED BUTTON** on the pop-up
- ❖ Adjust the volume on the computer
- ❖ Control the presentation from the computer, not the AMX touch panel

VIEW COMPUTER VIDEO FROM A POP-UP WITH THE AMX TOUCH PANEL.

- ❖ Attach the VGA cable to the pop-up
- ❖ Attach the short audio cable to the pop-up
- ❖ Attach the longest audio cable to the computer
- ❖ Attach the VGA cable to the computer
- ❖ Extend the desktop
- ❖ Set computer resolution to 1280x1024 60 Hz
- ❖ Press **VIDEO CONFERENCE OR MULTIMEDIA**
- ❖ Press any **DISPLAY OR PROJECTOR**
- ❖ Press a **POP-UP** or **LAPTOP** or **COMPUTER**
- ❖ Adjust the volume on the computer
- ❖ Control presentation from the computer

LISTEN TO AUDIO USING THE AUX ROOM AUDIO

- ❖ Press **MULTIMEDIA**, **VIDEO CONFERENCE**, or **VOICE CONFERENCE**
- ❖ Press **AUX ROOM AUDIO**
- ❖ Press any **POP-UP** or **PC** source
- ❖ Press/hold **AUX ROOM AUDIO** to discontinue audio

VIEW A TELEVISION TUNER CHANNEL

- ❖ Press **MULTIMEDIA**
- ❖ Press a **DISPLAY OR PROJECTOR**
- ❖ Press/hold **TV TUNER**
- ❖ Press **TV TUNER MUTED**
- ❖ Select Channels

ACCEPT AN INCOMING VOICE CALL

- ❖ Press **START** or **ANSWER**
- ❖ Activate a microphone

ACCEPT AN INCOMING VIDEO CALL

- ❖ Press **ANSWER CALL**
- ❖ Activate a microphone

PLACE A VOICE CONFERENCE CALL

- ❖ Press **VOICE CONFERENCE**
- ❖ Press the **NUMBERS** on the keypad to dial the far-site video number
- ❖ Press **CALL/CONNECT**
- ❖ Press **HANG UP (DISCONNECT)**
 - See detailed instructions for multiple calls

PLACE A VIDEO CONFERENCE CALL

- ❖ Press **VIDEO CONFERENCE**
- ❖ Press the **KEYPAD NUMBERS** to dial the video system number or IP address
- ❖ Press **CALL (CONNECT)**
- ❖ Press the “Push” button on the microphone
- ❖ Press **HANG UP / DISCONNECT**

PLACE A VIDEO CONFERENCE CALL USING THE VIDEO REMOTE EMULATOR.

- ❖ Press **VIDEO CONFERENCE**
- ❖ Press **ADVANCED OPTIONS**
- ❖ Press **CODEC REMOTE CONTROL EMULATOR**
- ❖ Press the **NUMBERS** on the Remote Emulator keypad to enter the video number
- ❖ Press **CALL** (green phone icon on remote emulator)
- ❖ Press **UP/DOWN ARROWS** to control the volume, if necessary
- ❖ Press **MUTE Codec RX**
- ❖ Press **MUTE Codec TX**
- ❖ Press **HANG UP** (red phone icon on remote emulator)

ADD A VOICE CONFERENCE TO A VIDEO CONFERENCE

- ❖ Video Conference is in progress
- ❖ Press **VOICE CALL**
- ❖ Press the **NUMBERS ON THE KEYPAD** to enter the telephone number
- ❖ Press **CALL (CONNECT)**
- ❖ Press **HANG UP (DISCONNECT)**

PLAY A BLU-RAY or DVD

- ❖ Press **MULTIMEDIA**
- ❖ Place a Blu-ray disc or DVD into the Blu-ray player
- ❖ Press any **DISPLAY IMAGE ICON**
- ❖ Press/hold **DVD/BLU-RAY**
- ❖ Press **PLAY** or **ENTER**
- ❖ Press **DVD/BLU-RAY MUTED**
- ❖ Follow on screen directions
- ❖ Use AMX Touch Panel navigation buttons

Quick Reference: Video, Voice and Multimedia

ADJUST DISPLAY/PROJECTOR FORMAT OPTIONS

- ❖ Press **VIDEO CONFERENCE**, **VOICE CONFERENCE**, or **MULTIMEDIA**
- ❖ Press a **DISPLAY** of your choice
- ❖ Press **ADJUST SELECTED DISPLAY FORMAT**
- ❖ Press **AUTO**, **ZOOM**, **NORMAL**, **FULL**, **JUST**, or **ASPECT TOGGLE**, etc.
- ❖ Press **CLOSE**

RECORD AUDIO TO A USB DRIVE OR SD CARD IN THE AUDIO RECORDER (DENON DN-F650R).

- ❖ Press **VOICE CONFERENCE**
- ❖ Place a call
- ❖ Press **AUDIO RECORDING**
- ❖ Remove all media from the audio recorder.
- ❖ Press the **USB DRIVE** or **SD CARD** button on the touch panel
- ❖ Insert the **USB DRIVE** or **SD CARD** into the audio recorder
- ❖ Close the SD Card door
- ❖ Press **REC**
- ❖ Press **PAUSE** as necessary
- ❖ Press **STOP**, when finished
- ❖ Press **VOICE CALL**, if necessary
- ❖ Press **HANG UP (DISCONNECT)**
- ❖ Remove the **USB DRIVE** or **SD CARD** from the audio recorder

HOW TO RECORD TO A DVD, HDD, ETC.

- ❖ See the detailed hardware manuals.

HOW TO EDIT AND SAVE A SPEED DIAL PRESET (VOICE CONFERENCE).

- ❖ Press **VOICE CONFERENCE**
- ❖ Press **SPEED DIAL**
- ❖ Press a **SPEED DIAL** preset number
- ❖ Press **EDIT**
- ❖ Press **EDIT** (Step 1)
- ❖ Type the new name (Step 2)
- ❖ Press **SAVE** (Step 3)
- ❖ Press **EDIT** (Step 4)
- ❖ Type the new phone number (Step 5)
- ❖ Press **SAVE** (Step 6)
- ❖ Press **CLOSE (X)** (Step 7)
- ❖ Press **CLOSE (X)**

VIDEO TRANSMIT TO TRANSMIT/PREVIEW VIDEO AND/OR GRAPHICS

- ❖ Press **VIDEO CONFERENCE**
- ❖ Press **VIDEO TRANSMIT** under Menu
- ❖ Press **COMPUTER INTERFACE SOURCES** (example)
- ❖ Press **COMPUTER**, **LAPTOP**, or **POP-UP** (example)
- ❖ Press one of the buttons located to the left or right of the Preview window

TRANSMIT GRAPHICS TO THE FAR-END

- ❖ Press **VIDEO CONFERENCE**
- ❖ Press the **KEYPAD NUMBERS**
- ❖ Press **CALL (CONNECT)**
- ❖ Press **VIDEO TRANSMIT** under Menu
- ❖ Press **COMPUTER INTERFACE SOURCES**
- ❖ Press a graphics **SOURCE**: any computer or Pop-up
- ❖ Press **SEND GRAPHIC**

MANUALLY TRANSMIT CAMERA VIDEO IN A VIDEO CALL

- ❖ Press **VIDEO CONFERENCE**
- ❖ Press **CAMERAS**
- ❖ Press **PRESS FOR INDIVIDUAL CAMERAS**
- ❖ Press **DIRECTIONAL ARROWS**
- ❖ Press **FASTER** or **SLOWER** to change tilt/pan speed.
- ❖ Press **AUTO FOCUS**, **FOCUS NEAR**, **FOCUS FAR**, **ZOOM IN**, or **ZOOM OUT** as desired.
- ❖ Press/hold **HOLD FOR FULL SCREEN**
- ❖ Press **CLOSE (X)**
- ❖ Press **SEND AS FULL MOTION**

SET THE TIME ON THE AMX TOUCH PANEL

- ❖ View the Main Page
- ❖ Press the **TIME**
- ❖ Press the button below **HOUR** (use arrows)
- ❖ Press the button below **MINUTE** (use arrows)
- ❖ Press the button below **SECOND** (use arrows)
- ❖ Press **SET TIME**
- ❖ Press **BACK**

SET THE DATE ON THE AMX TOUCH PANEL

- ❖ View the Main Page
- ❖ Press the **DATE**
- ❖ Press the button below **YEAR** (use arrows)
- ❖ Press the button below **MONTH** (use arrows)
- ❖ Press the button below **DAY** (use arrows)
- ❖ Press **SET TIME**
- ❖ Press **BACK**